

**GUANGZHOU HAWKS AUTOPARTS CO.,LTD**

No.8 Xicheng Road,Renhe Town,Baiyun District, Guangzhou City, Guangdong Province

[Web:www.hawksparts.com](http://www.hawksparts.com) [E-mail:sales@hawksparts.com](mailto:sales@hawksparts.com)[Contact person:Hawks Sale Team](mailto:sales@hawksparts.com) [Mob:+86 18027472559](tel:+8618027472559)**Cummins KTA38 and QSK38 Engine Overhaul Parts**

No.	Cummins KTA38 and QSK38 Upper Engine Gasket Sets	Part No.
1	UPPER ENGINE GASKET SET – KTA38 / QSK38	4089848
2	CYLINDER HEAD GASKET SET – KTA19 / KTA38 / QSK19 / QSK38	3803600
3	UPPER ENGINE GASKET SET – GTA38 / K38 / QSK38	3803600S
4	UPPER ENGINE GASKET SET – KTA19 / KTA38 / QSK19 / QSK38	4352580
	Cummins KTA38 and QSK38 Lower Engine Gasket Sets	
5	LOWER ENGINE GASKET SET – KTA19 / KTA38 / QSK19 / QSK38	3804301
6	LOWER ENGINE GASKET SET – KTA38 / QSK38	4956090
7	OIL PAN GASKET – KTA38 / KTA50 / QSK38 / QSK50	3043211
8	OIL PAN ADAPTOR GASKET – KTA38 / QSK38	3043212
9	OIL PAN GASKET – KTA38 / QSK38 / KTA50 / QSK50	3043214
	Cummins KTA38 and QSK38 Turbochargers	
10	TURBOCHARGER KIT – KTA38 / QSK38	4352314NX
11	TURBOCHARGER KIT – KTA38 / QSK38	2882105
12	TURBOCHARGER KIT – KTA38 / QSK38	2882099
13	TURBOCHARGER KIT – KTA38 / QSK38	5322391
14	REMANUFACTURED TURBOCHARGER – KTA38 / QSK38	2882105
15	TURBOCHARGER – KTA38 / QSK38 (HC5A)	4025015
16	REMANUFACTURED TURBOCHARGER – KTA38 / QSK38 (HC5A)	3801695
17	REMANUFACTURED TURBOCHARGER (HC5A)	3803103
18	TURBOCHARGER – KTA38 / QSK38	4955666
19	TURBOCHARGER – KTA38 / QSK38 (HX83, WATER COOLED)	4956143
	Cummins KTA38 and QSK38 Aftercoolers	
20	AFTERCOOLER CORE – KTA38 / QSK38	3638361
21	AFTERCOOLER CORE – KTA38 / QSK38	3626715
22	AFTERCOOLER GASKET – KTA38 / QSK38 / KTA50 / QSK50	3026423
23	AFTERCOOLER CORE – QSK38 / QSK45	3641079
24	AFTERCOOLER CORE – QSK38	3032030
	Cummins KTA38 and QSK38 Cylinder Head Gaskets	
25	CYLINDER HEAD GASKET SET – KTA38 / QSK38 / QSK50 (SINGLE)	4352579

26	CYLINDER HEAD GASKET SET – KTA38 / QSK38 (QUADRANT)	4352592
27	CYLINDER HEAD GASKET – QSK38	4334080
28	SINGLE HEAD GASKET KIT – KTA38GC / QSK38	4352579
29	CYLINDER HEAD GASKET – KTA19 / KTA38 / KTA50 / QSK19	3634664
30	CYLINDER HEAD GASKET – KTA19 / KTA38 / KTA50 / QSK19	3166288
31	CYLINDER HEAD GASKET SET – KTA38 / QSK38	3801896
32	CYLINDER HEAD GASKET SET – KTA38 / QSK38 (SINGLE)	4955431
	Cummins KTA38 and QSK38 Valve Train Components	
33	INTAKE AND EXHAUST VALVE GUIDE – KTA19 / KTA38	3202210
34	EXHAUST VALVE KIT – KTA19 / KTA38 / KTA50 / QSK19	3803528
35	EXHAUST VALVE INSERT – KTA19 / KTA38 / KTA50	205093
36	INTAKE VALVE SEAT INSERT – KTA19 / KTA38 / KTA50	3052819
37	INTAKE VALVE SEAT INSERT – KTA19 / QSK19 / QSK38	3026296
38	INTAKE VALVE – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	3803515
39	EXHAUST VALVE KIT – KTA19 / KTA38 / KTA50 / QSK19	3803529
40	ROCKER LEVER – KTA38 / QSK38 / KTA50 / QSK50	3053479
41	CYLINDER HEAD EXHAUST VALVE – QSK19 / KTA38 / QSK38	3088391
42	PUSH ROD – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	3017961
43	CAM FOLLOWER LEVER – KTA19 / QSK19 / KTA38 / QSK38	3039163
44	INTAKE VALVE SEAT INSERT – KTA19 / KTA38 / KTA50	3031098
45	INTAKE AND EXHAUST VALVE GUIDE – KTA19 / KTA38	3018818
46	INTAKE VALVE KIT – KTA19 / KTA38 / KTA50	3803518
47	CAM FOLLOWER LEVER – KTA19 / QSK19 / KTA38 / QSK38	3039164
48	CAM FOLLOWER LEVER – KTA19 / QSK19 / KTA38 / QSK38	3642503
49	INTAKE VALVE KIT – KTA19 / QSK19 / KTA38 / QSK38	2881836
50	ROCKER LEVER – KTA19 / QSK19 / KTA38 / QSK38 / KTA50	3053477
51	EXHAUST VALVE KIT – KTA19 / KTA38 / KTA50 / QSK19	4955286
	Cummins KTA38 and QSK38 Water Pumps	
52	RAW WATER PUMP – KTA38 / KTA50 / QSK38 / QSK50	4078936
53	RAW WATER PUMP – KTA38 / KTA50 / QSK38 / QSK50	3897387
54	RAW WATER PUMP – KTA38 / KTA50 / QSK38 / QSK50	3897791
55	RAW WATER PUMP KIT – QSK38 / QSK50 / QSK60	4955947
56	WATER PUMP – KTA38 / QSK38 / QSK50	3647140
57	RAW WATER PUMP – KTA38 / QSK38 / QSK50	4314522

58	RAW WATER PUMP – KTA38 / KTA50 / QSK38 / QSK50 (GILKES)	3085649
59	RAW WATER PUMP – KTA38 / QSK38	3393628
60	RAW WATER PUMP – KTA38 / QSK38 / QSK50	4376151
	Cummins KTA38 and QSK38 Thermostats	
61	THERMOSTAT – KTA38 / QSK38 / QSK45 / QSK50 / QSK60	3055663
62	THERMOSTAT	3349225
63	THERMOSTAT – KTA38 / QSK38 / QSK60 / QSK95	4014541
64	THERMOSTAT – KTA / QSK (176°F, NON VENTED)	3629205
65	REGULATOR – KTA38 / QSK38 / QSK45 / QSK50 / QSK60	3639983
	Cummins KTA38 and QSK38 Repair Kits	
66	WATER PUMP REPAIR KIT – KTA38 / KTA50 / QSK38 / QSK45	4085922
67	RAW WATER PUMP REPAIR KIT – KTA19 / KTA38 (MAJOR)	3897385
68	RAW WATER PUMP REPAIR KIT – KTA19 / KTA38 / KTA50 (MAJOR)	3866065
69	RAW WATER PUMP REPAIR KIT – KTA38 / KTA50 / QSK38 / QSK50	4334439
70	RAW WATER PUMP REPAIR KIT – KTA38 / QSK38 / QSK50	4334440
71	RAW WATER PUMP REPAIR KIT – KTA38 / QSK38 / QSK50	4334438
	Cummins KTA38 and QSK38 Heat Exchangers	
72	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	5254020
73	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	5254021
74	HEAT EXCHANGER PLATE GASKET – KTA38 / KTA50 (LOOSE)	4078967
75	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	4078963
76	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	4078961
77	HEAT EXCHANGER GASKET – KTA38 / KTA50 / QSK38 / QSK50	4078971
78	HEAT EXCHANGER COOLER CORE – QSK19 / KTA38 / QSK38	3968805
79	HEAT EXCHANGER – KTA38 / QSK38	5254016
80	HEAT EXCHANGER – KTA50 / QSK38 / QSK50	5254017
81	HEAT EXCHANGER CORE – QSK38	4998487
82	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	3969454
83	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	3969455
84	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	4078962
85	HEAT EXCHANGER PLATE – KTA38 / KTA50 / QSK38 / QSK50	4078966
86	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (B-PLATE)	4998572
87	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (B-PLATE)	4998570
88	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (A-PLATE)	4998571

89	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (A-PLATE)	4998573
90	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (A-PLATE)	4998565
91	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (A-PLATE)	4998567
92	HEAT EXCHANGER PLATE – QSK 38 / QSK50 (A-PLATE)	4998569
	Cummins KTA38 and QSK38 Lift Pumps	
93	FUEL PUMP – KTA38 / QSK38	3075537-BA18
94	FUEL TRANSFER PUMP – KTA19 / KTA38 / QSK19 / QSK38	4924192
95	FUEL TRANSFER PUMP – KTA38 / QSK38	3631035
	Cummins KTA38 and QSK38 Fuel Filters	
96	FUEL/WATER SEPARATOR FILTER (SPIN-ON)	FS1006
97	FUEL FILTER (SPIN-ON)	FF202
98	FUEL FILTER	FF5644
99	FUEL/WATER SEPARATOR FILTER	FS19870
	Cummins KTA38 and QSK38 Camshaft Components	
100	CAMSHAFT – KTA38 / QSK38	3642978
101	CAMSHAFT BUSHING – KTA38 / KTA50 / QSK38 / QSK50	205230
102	CAMSHAFT – KTA38 / QSK38	3066885
103	REMANUFACTURED CAMSHAFT – KTA38 / QSK38	3066893
104	CAMSHAFT THRUST BEARING	3007971
105	CAMSHAFT – KTA38 / QSK38 (LEFT BANK)	3066889
106	CAMSHAFT – KTA38 / QSK38	3066890
107	CAMSHAFT – KTA38 / QSK38	3066891
108	CAMSHAFT – KTA38 / QSK38	3629171
109	CAMSHAFT – KTA38 / QSK38	3630121
110	CAMSHAFT – KTA38 / QSK38	3630122
111	CAMSHAFT – KTA38 / QSK38	3629170
112	CAMSHAFT BUSHING – KTA38 / QSK38 / KTA50 / QSK50	3175805
113	CAMSHAFT – KTA50 / QSK50	3642977
	Cummins KTA38 and QSK38 Piston Kits	
114	PISTON KIT – KTA19 / KTA38 / QSK19 / QSK38 (OFFSET PIN)	3631241
115	PISTON KIT – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	3631245
116	PISTON KIT – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	3631246
117	PISTON KIT – KTA19 / KTA38 / QSK19 / QSK38 (14.5:1)	3631244
118	PISTON KIT – KTA19 / KTA38 / QSK19 / QSK38	3631242

119	PISTON BODY – KTA38 / QSK38 / KTA19 / QSK19 / KTA50	3096680
120	PISTON KIT – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	4090013
121	PISTON KIT – KTA38 / KTA50 / QSK38 / QSK50	3804747
	Cummins KTA38 and QSK38 Piston Ring Sets	
122	PISTON RING SET – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	2865146
123	PISTON RING SET – KTA19 / KTA38 / QSK19 / QSK38	4955975
124	PISTON RING SET – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	4955976
125	PISTON RING SET – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	4090028
	Cummins KTA38 and QSK38 Connecting Rod Bearings	
126	CONNECTING ROD BEARING – KTA38 / QSK38 (STANDARD)	3047390
127	CONNECTING ROD BUSHING – KTA19 / KTA38 / QSK19 / QSK38	3043909
128	CONNECTING ROD BEARING – KTA38 / QSK38 (.010, HALF)	3047391
129	CONNECTING ROD – KTA38 / QSK38 / QSK50	3632411
130	CONNECTING ROD BEARING – KTA38 / QSK38 (.020)	3047392
131	CONNECTING ROD SHELL – KTA38 / QSK38 / QSK50 (.030)	3047393
	Cummins KTA38 and QSK38 Liners and Liner Kits	
132	CYLINDER LINER KIT – KTA38 / KTA50 / QSK38 / QSK50	3007525
133	CYLINDER LINER – KTA38 / KTA50 / QSK38 / QSK50 (STANDARD)	3022157
134	CYLINDER LINER KIT – KTA38 / KTA50 / QSK38 / QSK50 (.010)	3023017
135	CYLINDER LINER KIT – KTA38 / KTA50 / QSK38 / QSK50	4955328
136	CYLINDER LINER KIT – KTA38 / KTA50 / QSK38 / QSK50 (.020)	3023018
137	CYLINDER LINER KIT – KTA19 / KTA38 / QSK19 / QSK38	3801268
138	CYLINDER LINER INSERT – KTA38 / QSK38 / KTA50	3021148
139	CYLINDER LINER INSERT – KTA38 / QSK38 (.1995 IN)	3011884
	Cummins KTA38 and QSK38 Crankshafts	
140	CRANKSHAFT – QSK38	3648625
141	CRANKSHAFT – QSK38	3648630
142	CRANKSHAFT – KTA38 / QSK38	3176424
143	CRANKSHAFT GEAR – KTA38 / QSK38 (SMALL END)	3628798
144	CRANKSHAFT – QSK38	4099002
145	CRANKSHAFT – KTA38 / QSK38	4099004
	Cummins KTA38 and QSK38 Crankshaft Bearings and Seals	
146	MAIN BEARING SET – KTA19 / KTA38 / KTA50 / QSK19	AR12250
147	FRONT CRANKSHAFT OIL SEAL – KTA19 / KTA38 / QSK19 / QSK38	3016792

148	MAIN BEARING SET – KTA38 / QSK38 / QSK50 (STANDARD)	3018210
149	REAR OIL SEAL – (WET DOUBLE LIP)	3005887
150	MAIN BEARING SET – KTA38 / QSK38 / QSK50 (.010)	3018211
151	MAIN BEARING SET – KTA38 / QSK38 (.030)	AR12253
152	MAIN BEARING SET – KTA38 / QSK38 (.020)	AR12252
153	MAIN BEARING SET – KTA38 / QSK38 / QSK50 (.020)	3018212
154	MAIN BEARING SET – KTA38 / QSK38 (.010)	AR12251
155	MAIN BEARING SET – KTA38 / QSK38 (.040)	AR12324
156	OIL SEAL – G28 / K50 / KTA38 / QSK38 / QSK50 / V28	3076066
157	FRONT CRANKSHAFT SEAL KIT – KTA38 / KTA50 / QSK38 / QSK50	3803994
158	REAR CRANKSHAFT OIL SEAL – KTA38 / QSK38 / KTA50 / QSK50	3070080
	Cummins KTA38 and QSK38 Vibration Dampers	
159	VIBRATION DAMPER – KTA38 / QSK38	3628652
160	VIBRATION DAMPER – KTA50 / QSK38 / QSK50 / QSK60	3089627
161	VIBRATION DAMPER – QSK38 (VISCOUS)	3630272
162	VIBRATION DAMPER – QSK38 (VISCOUS)	207531
163	VIBRATION DAMPER – KTA38 / QSK38 / QSK50 (VISCOUS)	3628650
	Cummins KTA38 and QSK38 Belts	
164	BELT TENSIONER – KTA38 / QSK38 / QSK50	3691279
165	BELT TENSIONER – KTA38 / QSK38 / QSK50	5333497
166	RIBBED V-BELT – KTA38 / KTA50 / QSK38 / QSK50	3644380
167	RIBBED V-BELT – KTA38 / QSK38	3179745
168	RIBBED V-BELT – KTA38 / KTA50 / QSK38 / QSK50 / QST30	3176459
169	RIBBED V-BELT – KTA38 / KTA50 / QSK38 / QSK50	3644379
170	RIBBED V-BELT – KTA38 / KTA50 / QSK38 / QSK50	3632788
171	BELT – K38 / K50	3039376
172	ALTERNATOR BELT – GTA38 / K38 / KTA38GC / QSK38	178567
173	RIBBED V-BELT – KTA38 / QSK38	3649080
174	RIBBED V-BELT – KTA38 / KTA50 / QSK38 / QSK50	5413003
175	V-BELT – GTA38 / K38 / KTA38GC / QSK38	178456
176	RIBBED V-BELT – KTA38 / KTA50 / QSK38 / QSK50 / QST30	5413022
177	V RIBBED BELT – G50 / GTA38 / K38 / K50 (23 RIBS)	5413001
178	V RIBBED BELT – KTA38GC / QSK38	5466992
	Cummins KTA38 and QSK38 Oil Coolers	

179	OIL COOLER CORE – KTA38 / QSK38 / QSK50	3635074
180	OIL COOLER CORE – KTA38 / KTA50 / QSK38 / QSK50	3627295
181	OIL COOLER CORE – KTA50 / QSK38 / QSK50	4916621
	Cummins KTA38 and QSK38 Piston Cooling Nozzles	
182	PISTON COOLING NOZZLE	3879479
183	PISTON COOLING NOZZLE – KTA38 / QSK38 / QSK50	3044464
184	PISTON COOLING NOZZLE – KTA38 / QSK38 / QSK50	4099041
185	PISTON COOLING VALVE – KTA38 / QSK38 / KTA50 / QSK50	3179664
186	PISTON COOLING NOZZLE – KTA38 / QSK38 / QSK50	3626728
187	PISTON COOLING NOZZLE – KTA38 / QSK38 / QSK50	3179664
	Cummins KTA38 and QSK38 Oil Filters	
188	OIL FILTER CARTRIDGE (SPIN-ON)	LF777
189	OIL FILTER	LF9050
190	OIL FILTER (SPIN-ON)	LF3325
191	OIL FILTER	LF3363
	Cummins KTA38 and QSK38 Lubricating Primers	
192	ENGINE LUBRICATING PRIMER – KTA50 / QSK38 / QSK50	3630004
193	ENGINE LUBRICATING PRIMER – KTA50 / QSK38 / QSK50	3628997
194	ENGINE LUBRICATING PRIMER – KTA50 / QSK38 / QSK50	3637969
195	ENGINE LUBRICATING PRIMER – KTA50 / QSK38 / QSK50	3628965
	Cummins KTA38 and QSK38 Exhaust Manifolds	
196	GASKET, EXHAUST MANIFOLD – KTA38 / KTA50	3037821
197	EXHAUST MANIFOLD – KTA38 / QSK38 (MIDDLE)	3028237
198	EXHAUST MANIFOLD – KTA38 / QSK38	4970227
199	EXHAUST MANIFOLD – KTA38 / QSK38	4970228
200	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3633734
201	EXHAUST MANIFOLD – KTA38 / QSK38	3638682
202	EXHAUST MANIFOLD – QSK50 (DRY PULSE, PREMIUM BELLOWS)	3633712
203	EXHAUST MANIFOLD – KTA38 / QSK38	3630551
204	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3631618
205	EXHAUST MANIFOLD – KTA38 / QSK38	3638680
206	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3633733
207	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3631624
208	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3631617

209	EXHAUST MANIFOLD – KTA38 / QSK38	3631304
210	EXHAUST MANIFOLD – KTA38 / QSK38	3630552
211	EXHAUST MANIFOLD – KTA38 / QSK38	3630553
212	EXHAUST MANIFOLD BELLOWS – QSK60 / QSK95 / KTA38 / QSK38	3968643
213	EXHAUST MANIFOLD – KTA38 / QSK38	3643097
214	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3631620
215	EXHAUST MANIFOLD – KTA38 / QSK38	3084621
216	EXHAUST MANIFOLD – KTA38 / QSK38	3084622
217	EXHAUST MANIFOLD – KTA38 / QSK38 (DRY PULSE, BELLOWS)	3631619
218	EXHAUST MANIFOLD – KTA38 / QSK38	3638132
219	EXHAUST MANIFOLD – KTA38 / QSK38 / QSK60 / QSK95	4014641
220	EXHAUST MANIFOLD – KTA38 / QSK38	4302357
221	EXHAUST MANIFOLD – KTA38 / QSK38	4302338
222	EXHAUST MANIFOLD – KTA38 / QSK38	4302335
223	EXHAUST MANIFOLD – KTA38 / QSK38	4302334
224	EXHAUST MANIFOLD – KTA38 / QSK38 / QSK60 / QSK95	4014642
225	EXHAUST MANIFOLD – KTA38 / QSK38	3630260
	Cummins KTA38 and QSK38 Electric Starters	
226	STARTER – KTA38 / QSK38	3651890
227	STARTER	3651893
228	STARTER – KTA38 / QSK38 / QSK50 (DUAL ELECTRIC)	3632273
229	STARTER	3632274
230	STARTER (AIR)	3026797
231	STARTER – KTA38 / KTA50 / QSK38 / QSK50 (AIR)	3037489
232	STARTER – KTA38 / KTA50 / QSK38 / QSK50 (AIR)	3634784
	Cummins KTA38 and QSK38 Senders and Switches	
233	TEMPERATURE SWITCH	4327015
234	PRESSURE SENSOR – KTA / QSK	2894868
235	TEMPERATURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38	4326919
236	TEMPERATURE SWITCH – KTA19 / KTA38 / QSK19 / QSK38	4917761
237	PRESSURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	3408515
238	SPEED SWITCH (24 V)	4019430
239	RELAY SWITCH	3628971
240	PRESSURE SWITCH – KTA38 / QSK38 / QSK45 / QSK50	4924925



241	PRESSURE SWITCH – KTA38 / QSK38 / QSK50	3628750
242	MAGNETIC SWITCH	146457
243	FLUID LEVEL SWITCH	3348814
244	TEMPERATURE SENSOR – KTA38 / QSK38 / QSK50	3408319
245	TEMPERATURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38	4099166
246	TEMPERATURE SENSOR – KTA38 / QSK38 / QSK50 / QSK60	4954491
247	TEMPERATURE SENSOR – KTA38 / QSK38 / QSK50	4954454
248	PRESSURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	4954405
249	PRESSURE SENSOR – KTA38 / QSK38 / QSK50	4954185
250	PRESSURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38	4098644
251	PRESSURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	3408600
252	PRESSURE SENSOR – KTA38 / QSK38 / QSK50	3408651
253	COOLANT FLUID LEVEL SENSOR – GTA38 / K38 / KTA38GC	4903016
254	FLUID LEVEL SWITCH – KTA38 / QSK38 / QSK50	3057439
255	ROTARY SWITCH – KTA / QSK	2871200
256	TEMPERATURE SENSOR – KTA38 / QSK38 / QSK50	3633306
257	SPEED SENSOR – KTA19 / KTA38 / QSK19 / QSK23 / QSK38	4042082
258	PRESSURE SENSOR – KTA19 / KTA38 / QSK19 / QSK38 / QSK50	4927803
259	PUSH BUTTON SWITCH – KTA38 / QSK38 / QSK50 / QSK60 / QSK95	5254228
260	RELAY SWITCH – KTA38 / QSK38 / QSK45 / QSK60 / QSK95	4951860
261	TEMPERATURE SENSOR – KTA38 / QSK38 / QSK50	4326918
262	POSITION SENSOR – KTA38 / QSK38 / QSK50	4307466
263	POSITION SENSOR – GTA38 / KTA38 / QSK38	4327236
264	TEMPERATURE SWITCH – KTA19 / KTA38 / QSK19 / QSK38	4327014
265	TEMPERATURE SWITCH	4327017
	Parts for Cummins KTA38 and QSK38 Engines	
266	COVER PLATE GASKET – KTA38 / QSK38 / KTA50 / QSK50	3648607
267	OIL PUMP – KTA38 / QSK38	3634640
268	PLUNGER – KTA38 / QSK38 / KTA50 / QSK50	3026927
269	FRONT GEAR COVER BUSHING – KTA38 / QSK38 / KTA50 / QSK51	3177509
270	FRONT GEAR COVER BUSHING – KTA38 / QSK38 / KTA50 / QSK50	3177510
271	SHUT-OFF SOLENOID – L10 / G50 / K50 / QSK50	3054609
272	WATER PUMP SEAL – GTA38 / K38 / KTA38 / QSK38	3089056
273	PIN – KTA19 / QSK19 / KTA38 / QSK38 / KTA50 / QSK50	4009479

274	VALVE COVER GASKET – QSK60 / QSK60G / K19 / KTA19	3081898
275	CONNECTION GASKET – KTA38 / QSK38 / KTA50 / QSK50	3047665
276	EXHAUST CLAMP – KTA19 / QSK19 / KTA38 / QSK38	201989
277	WATER PUMP BEARING	3003354
278	WATER PUMP BEARING – KTA38 / QSK38 / QSK60 / QSK95 / KTA50	S16069
279	PLUNGER – KTA38 / QSK38 / KTA50 / QSK50	3627927
280	ZINC ELECTRODE PLUG – ISC / KTA38 / QSK38 / QSC / VTA 1710	68241
281	LOCK NUT – KTA19 / QSK19 / KTA38 / QSK38	3016182
282	FREQUENCY METER – GTA38 / K19 / KTA19G / QSK19 / QSK38 / NH855 / NT855	3015044
283	INJECTOR AND VALVE ADJUSTMENT KIT – K19 / K38 / K50	3822575
284	OFFSET WOODRUFF KEY – V504 / V555 / V903 / KTA38 / QSK38	200714
285	PLAIN HOSE – KTA19 / QSK19 / KTA50 / QSK50 / KTA38 / QSK38	60985
286	PLAIN HOSE – KTA19 / QSK19 / KTA50 / QSK50 / KTA38 / QSK38	3630125
287	PLAIN HOSE – ISC / QSC / KTA38 / QSK38	3635070
288	MOLDED HOSE – KTA38 / QSK38	3630852
289	HUMP HOSE	3636437
290	FLEXIBLE HOSE – KTA38 / QSK38 / KTA50 / QSK50	3176571
291	FLEXIBLE HOSE – KTA38 / QSK38 / KTA50 / QSK50	3176576
292	FLEXIBLE HOSE	3632028
293	FLEXIBLE HOSE – KTA38 / QSK38 / KTA50 / QSK50	3627910
294	FLEXIBLE HOSE – KTA38 / QSK38 / KTA50 / QSK50	3630864
295	FLEXIBLE HOSE – KTA38 / QSK38 / KTA50 / QSK50	3963454
296	WIRING HARNESS – KTA38 / QSK38 / QSK50	3629161
297	SIGHT GAUGE – KTA38 / QSK40 / ISM / QSM	3008837
298	WATER HEADER COVER GASKET	3637731
299	WATER HEADER COVER GASKET	3637727
300	WATER INLET CONNECTION GASKET – KTA38 / QSK38	3029009
301	DOWEL PIN – KTA38 / QSK38 / VTA SERIES	102978
302	VALVE SPRING COMPRESSOR TOOL – KTA19 / QSK19 / KTA38 / QSK38	3163606
303	EXHAUST CLAMP – KTA19 / QSK19 / KTA38 / QSK38 / KTA50	4936174
304	V BAND CLAMP – NH220 / NH250 / NTA855 / VTA / KTA38 / QSK38	3633805
305	BUSHING – SMALL V SERIES / VTA / KTA38 / QSK38 / N14	116391
306	PLUNGER – KTA38 / QSK38 / KTA50 / QSK50	3021618
307	BYPASS VALVE BODY – KTA / QSK	3028552

308	FLEXIBLE HOSE – KTA38 / QSK38	4946387
309	FLEXIBLE HOSE – KTA38 / QSK38	3638282
310	CYLINDER BLOCK – QSK38	4955577
311	ROCKER LEVER SHAFT – GTA38 / K38 / QSK38	3176772
312	SEA WATER PUMP GEAR – KTA19 / QSK19 / KTA38 / QSK38 / KTA50	3008841
313	FUEL CONTROL ACTUATOR – KTA38 / QSK38 / NH220 / NTA855 (24V)	3408326